

REMINGTON®

Pink Lady Retro Dryer



D41100P

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery




Visit www.remington.co.uk/product/register
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.

Remove all packaging before use.

IMPORTANT SAFEGUARDS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable. Ask an electrician for advice.
- 3 For UK, Household Use Only. Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 4 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 5 Warning: Do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors. 
- 6 When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- 7 Keep direct airflow away from eyes or other sensitive areas.
- 8 Avoid allowing any part of the hairdryer to come into contact with the face, neck or scalp.
- 9 In use, take care that the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop.
- 10 If this should occur, switch off and allow the appliance to cool down.
- 11 Ensure the inlet grille is free from obstructions such as household fluff, loose hair etc.
- 12 Do not leave the appliance unattended while plugged in.
- 13 Do not set the appliance down while still on.
- 14 Do not place the appliance on any soft furnishings.
- 15 Do not use attachments other than those we supply.
- 16 Do not wrap the cord around the unit. Check the cord regularly for any sign of damage.
- 17 Do not use the appliance if it is damaged or malfunctions.

- 18 Do not use the diffuser on the highest heat setting.
- 19 This appliance is not intended for commercial or salon use.
- 20 Let the appliance cool down before cleaning and storing away.



KEY FEATURES

- | | |
|-------------------------------------|---------------------------------------|
| 1 Ceramic grille | 7 Hang up loop |
| 2 Speed/heat setting switch | 8 Cord |
| 3 Cool shot | 9 Teasing brush |
| 4 Concentrator | 10 Ponytail tie |
| 5 Diffuser | 11 Retro-look style guide (not shown) |
| 6 Removable easy clean side grilles | 12 Storage bag (not shown) |

PRODUCT FEATURES

- 1650- 2000 Watts Retro Hairdryer.
- Ceramic grille for even heat and fast drying.
- Cool shot – to set your style and add extra shine.
- Slim air concentrator for precision styling.

INSTRUCTIONS FOR USE

- Wash and condition your hair as normal.
- ★ Squeeze out excess moisture with a towel and comb through.
- Hair sprays contain flammable material – do not use while using the dryer.
- Plug the product into the mains power supply.
- To turn on slide the switch up one position until it is at setting 'I'.
- Select the desired temperature and speed setting using the switches on the handle.
- To increase the temperature and speed, slide the switch upwards to the 'II' or 'III' position.
- For fast drying and to remove excess moisture from the hair use dryer on high heat/high speed.
- To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
- To set the style press the cool shot button whilst styling. Release it to reactivate heat.
- To create extra volume at the roots of the hair, keep head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp. Be careful not to burn the scalp. Dry gently on a low heat/low speed setting.
- ★ Caution: Do not use the diffuser on the highest heat setting.
- When finished, turn the appliance off and unplug.

CLEANING AND MAINTENANCE

- Unplug the appliance and let it cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove dust and dirt from both the side grilles and clean with a soft brush.
- Don't use harsh or abrasive cleaning agents or solvents.

- To remove the side grilles for cleaning hold the dryer handle in one hand, then with the other place your thumb and index finger on either side of the side grille. Twist the grille in the anti-clockwise direction and pull away from the dryer.
- To replace the side grille hold in place with thumb and index finger again and twist clockwise to click back onto the dryer.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.ie.remington-europe.com

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. D4110OP

17/UK/ D4110OP T22-0004867 Version 02 /17

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2017 Spectrum Brands, Inc.