

# REMINGTON®

## Comfort Series Plus/Pro Foil Shaver



PF7400  
PF7500

Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery




Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington).  
You must register within 28 days  
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFETY INSTRUCTIONS

---

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Do not put the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors. 
- 3 **WARNING:** Keep the appliance dry.
- 4 Keep the power cord and plug away from heated surfaces.
- 5 Make sure the power plug and cord to not get wet.
- 6 Do not leave the appliance unattended while plugged in, except when charging.
- 7 Do not use attachments other than those we supply.
- 8 Do not twist or kink the cable, or wrap it round the appliance.
- 9 Do not use the appliance if it is damaged or malfunctions.
- 10 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 11 Do not plug or unplug the appliance with wet hands.
- 12 Store the product at a temperature between 15°C and 35°C.
- 13 For use on facial hair only. Not intended for shaving the hair on your head.
- 14 This appliance is not intended for commercial or salon use.
- 15 This appliance should be charged by approved safety isolating adaptors SW-040010EU (EU), SW-040010BST (UK) with the output capacity of 4Vdc; 100mA.



## KEY FEATURES

- |                      |   |
|----------------------|---|
| 1 On/off switch      | 6 Power port (when not in charging stand) |
| 2 Foil screens       | 7 Pop-up trimmer                          |
| 3 Cutter assembly    | 8 Head guard                              |
| 4 Hairpocket         | 9 Adaptor (not shown)                     |
| 5 Charging indicator | 10 Cleaning brush (not shown)             |
|                      | 11 Charging stand (PF7500)                |

---

## GETTING STARTED

---



- It is recommended that you use your new shaver daily for up to two weeks to allow time for your beard and skin to become accustomed to the new shaving system.

### CHARGING YOUR APPLIANCE

- It is recommended to fully charge your appliance before using for the first.
- Please refer to the charge times shown in this book.
- Ensure the product is switched off.
- The adaptor automatically adjusts to a main voltage between 100V and 240V.
- Connect the shaver to the adaptor and then to the mains.
- Connect the adaptor to the charge stand and then to the mains (PF7500).
- Place the charge stand on a flat surface (PF7500).
- Place the shaver in the charge stand with the charge pins contacting (PF7500).

### Charge Level Indicators

Charge Level	Indicator
Charging	Green LED will show
Fully Charged	Green LED will turn off

- Run time from fully charged is up to 40 mins. (PF7400), up to 50 mins (PF7500)
- Charge time from empty is 16 hours (PF7400), 120 mins (PF7500).
-  **Note:** To preserve the life of your batteries, let them run out every 6 months then fully charge.
-  **Quick charge function**
- PF7500 has a 5min quick charge feature that will provide enough charge for 1 shave (3 mins).

---

## INSTRUCTIONS FOR USE

---

- For corded use connect the shaver to the adaptor, then to the mains. (PF7500)
- Make sure your shaver is properly charged.
- Switch the shaver on by pressing the on/off switch.

### SHAVING

- Stretch the skin with your free hand so the hairs stand upright.

- Hold the shaving head so that the foils touch your face.
- Use short linear strokes.

### ✦ TRIMMING

- Slide up the trimmer release button to activate the trimmer.
- Hold the trimmer at a right angle to your skin.
- To retract the trimmer, push the top rear of the trimmer down until it locks under the trimmer release button.

### ➡ Tips for best results

- Always hold the shaver at right angles to the skin so that all foils are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short linear motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid irritation and damage to the foil heads.

---

## 👁 CLEANING AND MAINTENANCE

---

- To ensure long lasting performance clean after each use.
- Ensure the appliance is switched off and unplugged from the mains.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.

### ✦ DRY CLEANING

- Pull the foil assembly up to remove from the hair pocket.
- Gently tap out the excess hair shavings and use a cleaning brush to clean out the hair pocket if necessary.
- ✦ Note: Do not use a brush to clean the shaving foils.
- Replace the head assembly.

### ✦ WASHABLE CLEANING

- Pull the foil assembly up to remove from the hair pocket.
- Do not use the brush to clean the foils but blow the shavings out or rinse in running water.
- Use the cleaning brush to sweep any loose hairs from the cutter and trimmer. Rinse in running water.
- Replace the head assembly.
- Lubricate the teeth of the trimmer every six weeks with a drop of sewing machine oil.

- ✱ Note: the shaver headguard has been designed so that when placed on the shaver head, the shaver can be stood on the headguard to allow any water droplets to drain from the shaver head.

#### ✱ REPLACING THE FOILS & CUTTERS

- To ensure continued high quality performance from your shaver, we recommend the foils and cutters are replaced regularly.

#### ✱ Signs that your foil/s and cutter/s need replacing

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

#### ✱ TO REPLACE THE FOIL

- Pull the foil assembly up to remove from the hair pocket.
- Insert the new foil assembly on the hair pocket, press down and click into place.

#### ✱ REPLACING THE CUTTERS

- Grasp the cutter between your thumb and forefinger and pull upwards.
- Snap the new cutter into the oscillator tip.

#### ✱ Note: DO NOT press on the cutter ends as this may cause damage.

- Foil and cutters replacement model: SPF-PF

---

## BATTERY REMOVAL

---

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Remove 2 screws from the end cap. Remove the end cap and main housing from the back.
- Using a small screwdriver, pry off the rear housing.
- Remove 6 screws and then open the inner cover from the shaver to expose the battery.
- Cut the tabs which connect the battery to the circuit board and remove the battery.
- Dispose of the battery safely.



## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



## ➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)

## ➡ SERVICE CENTRE

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.remington.co.uk](http://www.remington.co.uk)

---

 **REGISTER ONLINE FOR**

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit [www.productregister.co.uk/remington](http://www.productregister.co.uk/remington). You must register within 28 days of purchase.

## **Model No. PF7400/PF7500**

14/UK/ PF7400/PF7500 T22-0002483 Version 08 / 14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2014 SBI