

# REMINGTON®

## Tangled 2 Smooth Electric Detangling Brush





**DT7432**

 [www.remington.co.uk](http://www.remington.co.uk)

**Register online for £10,000 prize draw**  
**EXTRA year guarantee FREE rewards gallery**

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.



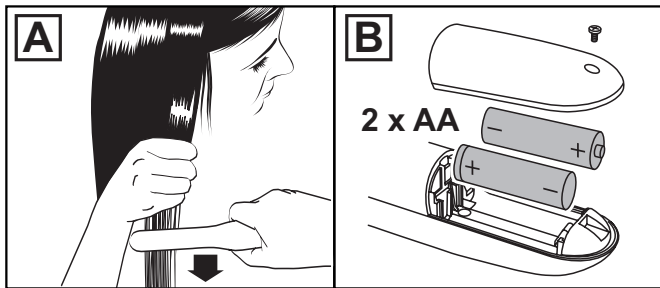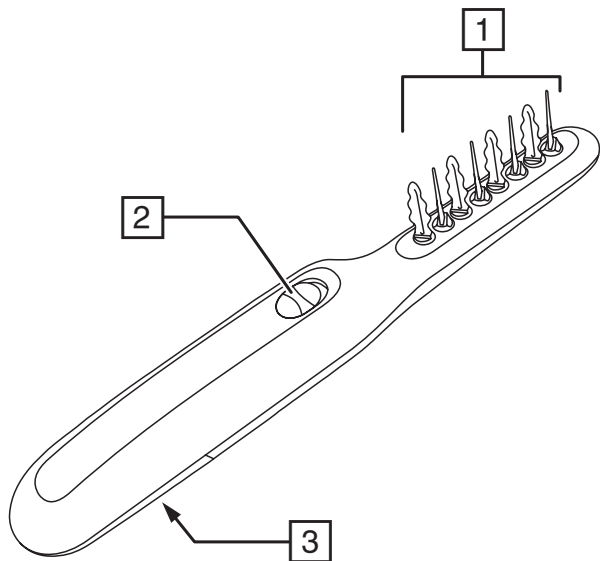

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## **IMPORTANT SAFEGUARDS**

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance out of reach of children under 8 years.
- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use the appliance if the brush teeth are damaged or broken as injury may occur.
- This appliance is not intended for commercial or salon use.

---

## **PARTS**

---

- |                  |                            |
|------------------|----------------------------|
| 1. Brush teeth   | 3. Battery door            |
| 2. On/off switch | 4. Brush cover (not shown) |

---

## **BEFORE FIRST USE**

---

- Insert the supplied AA batteries - see BATTERIES

---

## **INSTRUCTIONS FOR USE**

---

- Your detangling brush can be used on wet or dry hair.
  - For wet use, wash and condition your hair as normal.
  - Squeeze out excess moisture with a towel.
1. Divide your hair into manageable sections. Work with one section at a time.
  2. Securely hold the hair section 10 or 12 cm from the end.

3. Switch your detangling brush on then place it into the hair just below your hand. Ease it through the hair to the end using short strokes (Fig A).
4. Grasp the same section of hair a little further up and repeat the process.
5. Gradually work your way through the hair section until you can run the detangling brush smoothly from the roots to the ends of the section.
6. Repeat for each section of hair.
  - Your detangling brush should glide easily through wet or dry hair so don't try to force it.
  - If you come across a difficult tangle simply take the detangling brush out of your hair and start again.
  - Avoid allowing the brush teeth to press against your scalp.

---

## CLEANING AND MAINTENANCE

---

1. Make sure the brush is turned off.
2. Remove any hairs from the teeth.
3. Clean the teeth and handle with a soft, damp cloth. Don't use solvents or other cleaning agents.
4. Replace the brush cover after cleaning.

---

## BATTERIES

---

### Fitting, removing and replacing (Fig B)

- Your detangling brush requires 2 x 1.5V AA alkaline batteries (included).
1. Undo the battery door screw using a suitable screwdriver.
  2. Lift off the door
  3. Remove or replace the batteries as required. Follow the battery polarity shown in Fig B. We recommend you use VARTA® batteries.
- Remove batteries if the unit is not going to be used long periods.
  - Different types of batteries or new and used batteries are not to be mixed.
  - Do not short circuit the battery contacts.
  - Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
  - Do not dispose of used batteries in a fire.
  - Do not try to charge non-rechargeable batteries.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.  
Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the model number to hand, as we won't be able to help you without it. The model number can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at


**[www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)**


---

## SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.ie.remington-europe.com](http://www.ie.remington-europe.com)

---

 **REGISTER ONLINE FOR**

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.

## **Model No. DT7432**

17/UK/ DT7432 T22-0005354-B Version 11 /17

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2017 Spectrum Brands, Inc.