





## Quickstart manual Handsfree jobsite radio


## 1


/!`


How to insert the batteries and connect to the mains (230V)

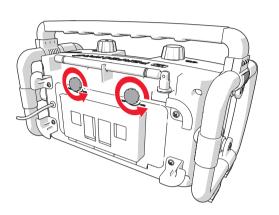


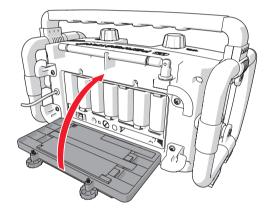

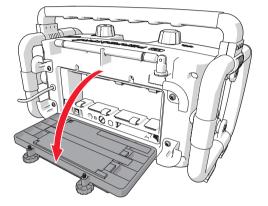


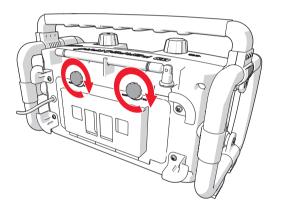

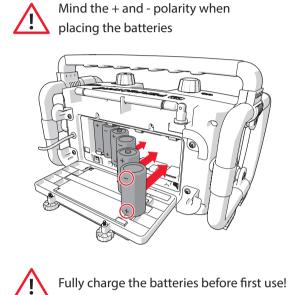

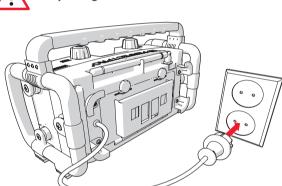


After connecting to the mains for the first time, the handsfree jobsite radio will perform a quick scan of the FM and DAB bands and switches to standby

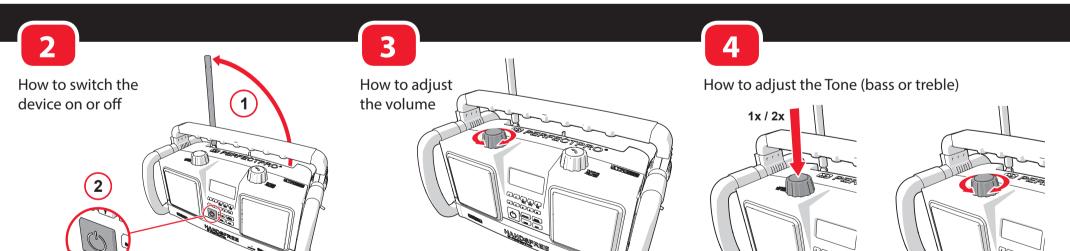






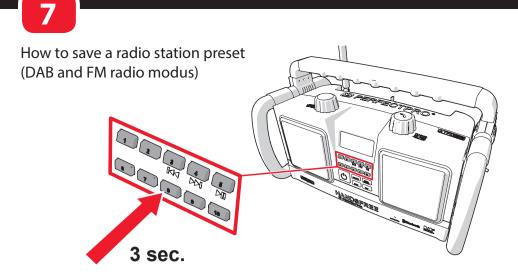

How to search for a radio station in FM modus manually


How to search for a radio station in FM modus automatically

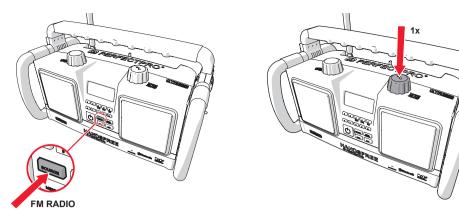


10

8

How to charge a mobile device using the USB connection

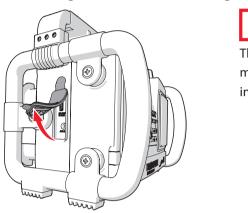

The USB cable and the mobile device are not included!

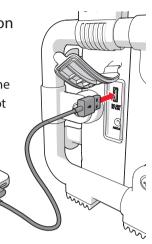





FM RADIO


9

 How to make a Bluetooth connection

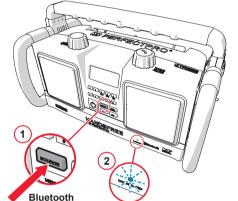






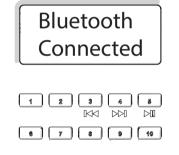

12

How to operate music on your mobile device via the Handsfree jobsite radio (Bluetooth modus)

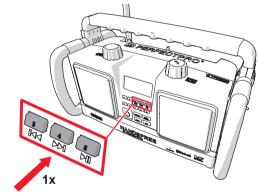


13


How to answer an incoming phonecall while connected with Bluetooth





How to make an AUX IN connection

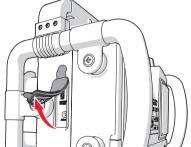

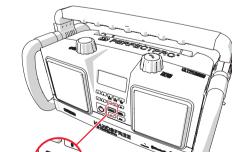



CE



## **Technical specifications**

Power Source: Batteries: Batteries for backup: AC 230V, 50-60Hz 6 x 1,5V or 6 x 1,2V (D) 2 x 1,5V (AA)

Power usage:

In use: <15W Standby: <0,5W Frequency range: FM88 – 108,0 MHz DAB 174,928 – 239,200 MHz Speakers: Measurements: Resistance: Output:

2 x Ø100mm 16 ohm Nominal 2 x 5W This product is intended for the European market. For more information go to www.perfectpro.eu or read the Instruction manual.

Aux in connection: Ø 3,5mm Bluetooth: Version: 4.0 Support: A2DP, ACRCP and HFP Rain, dirt and dust resistant (IPX4)

