

Veiledning for å komme raskt i gang


1 Sette inn batteriene i fjernkontrollen

Sett inn to **AAA/R3** eller tilsvarende type batterier. Vær oppmerksom på riktig polaritet (+/-) når du setter batteriene og setter tilbake batteridekselet.




2 Koble antennen TV-en

BAKSIDEN AV TV-EN

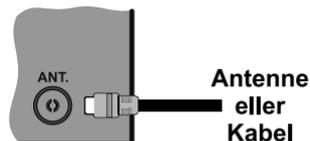

3 Sett støpselet til TV-en i en stikkontakt

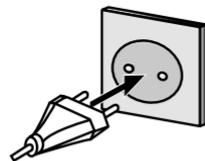


4 Skru på TV-en

Koble strømledningen til en strømkilde som f.eks. en stikkontakt (220-240V AC, 50 Hz).

For å slå TV på fra standbymodus, enten:

Trykk på "**Standby**"-knappen, **Program +/-** eller en nummertast på fjernkontrollen.

Trykk på sidefunksjonsbryteren på TV-en til TV-en kommer på fra ventemodus.

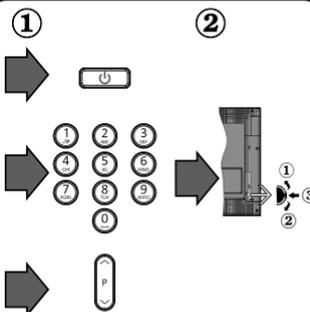

5 HDMI-inngang

VENNLIGST PÅSE AT BEGGE ENHETER ER SKRUDD AV FØR TILKOBLING. Bruk en HDMI til HDMI-kabel for å koble de to enhetene sammen. Trykk **SOURCE**-knappen på fjernkontrollen for å velge HDMI-inngang. Hver gang den trykkes vil menyen på skjermen bekrefte ditt valg.



Til HDMI-tilkobling
på enheten



6 Automatisk konfigurasjonsprosedyre

Når TV-en brukes for første gang, vil installasjonsveilederen guide deg gjennom prosesen. Først vil skjermen for valg av språk vises. Velg ønsket språk og trykk **OK**.

På de neste skjermbildene angir du preferansene dine ved bruk av pilknappene.

Om valg av kringkastingstype

Digital antenne: Hvis søkealternativet for kringkasting er valgt, vil TV-en søke etter digitale antennesendinger etter at de andre første innstillingene er gjort.

Digital kabel: Hvis søkealternativet Kabel er valgt, vil TV-en søke etter digitale kabelsendinger etter at de andre første innstillingene er gjort. I henhold til dine andre preferanser kan det vises en bekreftelsesmelding før du begynner å søke. Velg **JA** og trykk **OK** for å fortsette. For å avbryte handlingen, trykk Nei og **OK**. Du kan velge **Nettverk** eller angi verdier slik som **Frekvens**, **Nettverks-ID** og **Søkestrinn**. Når du er ferdig, trykk på **OK**-knappen.

Merk: Søkevarigheten vil variere avhengig av den valgt søkestrinn.

Analog: Hvis søkealternativet Analog er valgt, vil TV-en søke etter analoge sendinger etter at de andre første innstillingene er gjort.

Du kan også velge en kringkastingstype som favoritt. Utvalgte sendetyper vil bli prioritert under søkeprosessen, og disse kanalene vil bli listet opp øverst på kanallisten. Når du er ferdig, trykk på **OK** for å fortsette.

Du kan på dette tidspunktet aktivere alternativet **Butikkmodus** (valgfritt). Dette alternativet er kun ment for butikkbruk. Det anbefales å bruke **Hjemmemodus** for hjemmebruk.

Etter at de første innstillingene er ferdige, vil TV-en vil begynne å søke etter tilgjengelige sendinger i kringkastingstypene du har valgt.

Etter alle tilgjengelige stasjoner lagret, vil søkeresultatene bli vist. Trykk **OK** for å fortsette. **Rediger kanalliste**-menyen vil så bli vist. Du kan redigere kanallisten i henhold til preferansene dine eller trykke på **Menu**-knappen for å avslutte og se på TV.

Merk: Ikke slå av TV-en mens du begynner første gangs installasjon.

Quick Start Guide


1 Insert the batteries into the Remote Control

Insert two **AAA/R3** or equivalent type batteries inside. Observe the correct polarity (+/-) when inserting batteries and replace the battery cover.




2 Connect the antenna to your TV

REAR SIDE OF THE TV

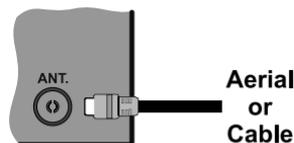

3 Connect the TV to the mains socket

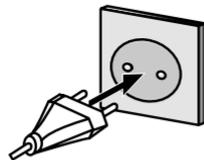


4 To switch the TV on

Connect the power cord to a power source such as a wall socket (220-240V AC, 50 Hz).

To switch on the TV from standby mode either:

Press the **"Standby"** button, **Programme +/-** or a numeric button on the remote control.

Press the side function switch on the TV until the TV comes on from standby.

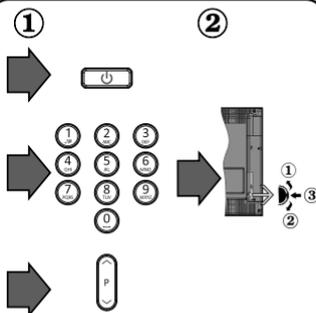

5 HDMI input

PLEASE ENSURE BOTH UNITS ARE SWITCHED OFF BEFORE CONNECTING. Use a HDMI to HDMI cable to connect the two units together. To select the HDMI input, press the **Source** button on the remote control. Each time it is pressed the on-screen menu confirms your selection.



To HDMI connection
on the device



6 Auto Setup procedure

When the TV is operated for the first time, installation wizard will guide you through the process. First, language selection screen will be displayed. Select the desired language and press **OK**. On the following screens, set your preferences using the directional buttons.

About Selecting Broadcast Type

Digital Aerial: If this broadcast search option is turned on, the TV will search for digital terrestrial broadcasts after other initial settings are completed.

Digital Cable: If this broadcast search option is turned on, the TV will search for digital cable broadcasts after other initial settings are completed. According to your other preferences a confirmation message may be displayed before starting to search. Select **Yes** and press **OK** to proceed. To cancel operation, select **No** and press **OK**. You can select **Network** or set values such as **Frequency**, **Network ID** and **Search Step**. When finished, press **OK** button.

Note: Searching duration will change depending on the selected Search Step.

Analogue: If Analogue broadcast search option is turned on, the TV will search for analogue broadcasts after other initial settings are completed.

Additionally you can set a broadcast type as your favourite one. Priority will be given to the selected broadcast type during the search process and the channels of it will be listed on the top of the channel list. When finished, press **OK** to continue.

You can activate **Store Mode** option at this point. This option is intended only for store use. It is recommended to select **Home Mode** for home use.

Press **OK** button on the remote control to continue and the **Network/Internet Settings** menu will be displayed. Please refer to the next section about internet connection on the next page to configure a wired or a wireless connection. After the settings are completed press **OK** button to continue.

After the initial settings are completed TV will start to search for available broadcasts of the selected broadcast types.

After all the available stations are stored, scan results will be displayed. Press **OK** to continue. The **Edit Channel List** menu will be displayed next. You can edit the channel list according to your preferences or press the **Menu** button to quit and watch TV.

Note: Do not turn off the TV while initializing first time installation.



50494645